

$$\text{Ice Hardness Adjustment Factor} = \frac{144 \text{ Btu/lb} + 38 \text{ Btu/lb}}{144 \text{ Btu/lb} \times \left(\frac{\text{Ice Hardness Factor}}{100} \right) + 38 \text{ Btu/lb}}$$