


FIGURE 7 - VEHICLE COORDINATE REFERENCE SYSTEM FOR INERTIAL TESTING

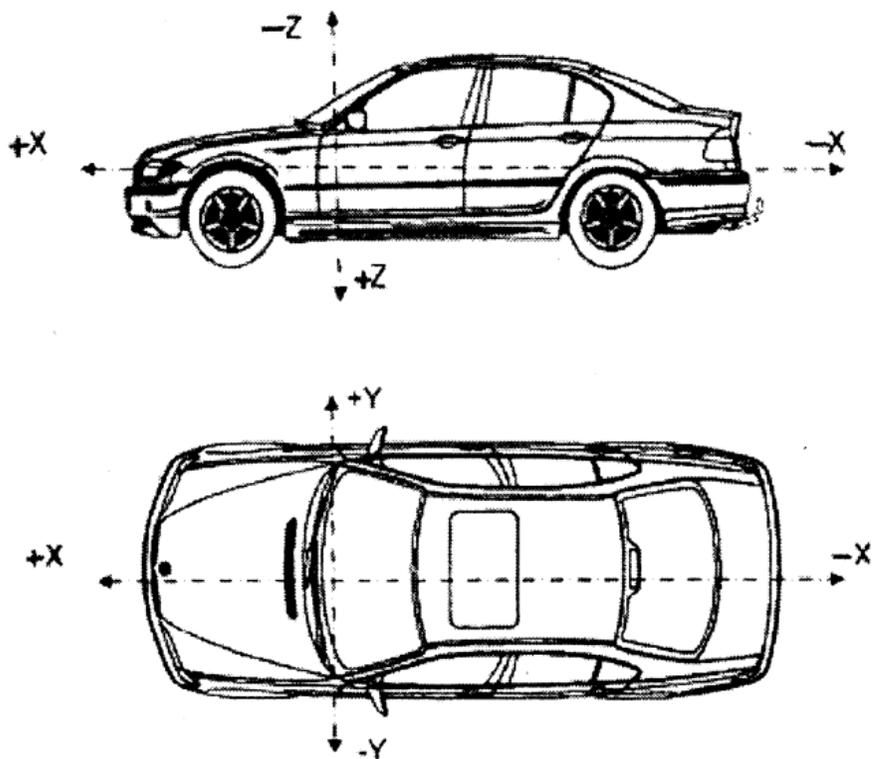

- X = longitudinal direction
- Y = transverse direction
- Z = vertical direction