

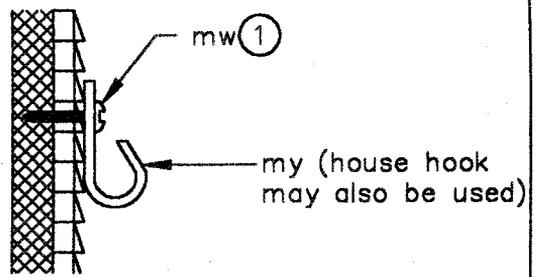
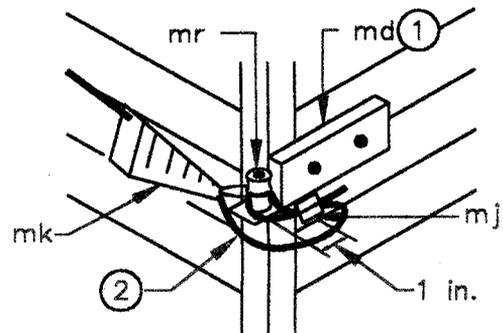
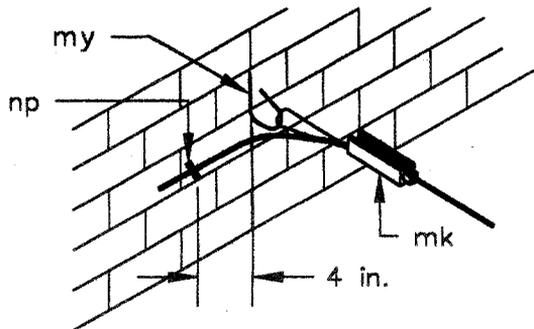


MASONRY

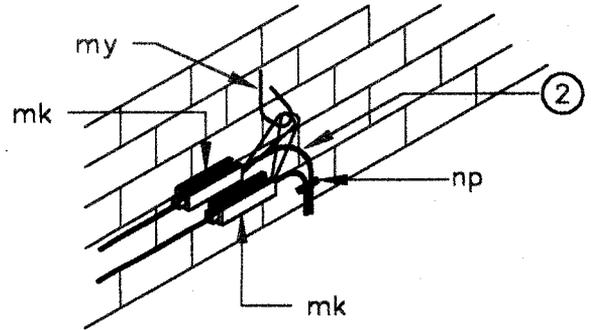

MASONRY OR FULL BRICK VENEER

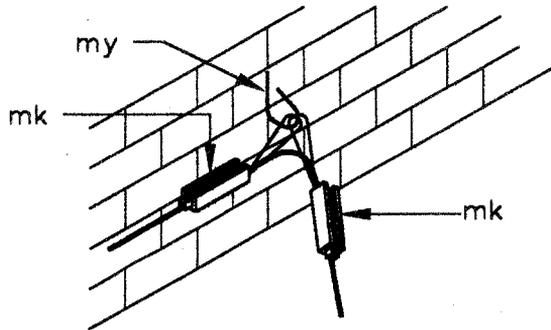

Notes:

- ① See Table 4 for appropriate fasteners to be used with attachments. Expansion anchors not required on frame buildings, attachments must be firmly secured in studs.
- ② Provide slack wire in the form of a smooth curve.
- ③ For converting English units to metric units use 1 in. = 25.4 mm.

ITEMS	MATERIALS	ITEMS	MATERIALS
		*mw	Screw, R.H., stainless steel, wood
mk	Clamp, drop wire	*my	Hook, drop wire
*md	Bracket, house	*ph	Anchor, expansion
*mr	Knob, insulator, "S"	np	Clamp, cable
-	Hook, house	*mj	Clip, drop wire

RURAL TELECOMMUNICATIONS CONSTRUCTION PRACTICES
UNINSULATED FIRST ATTACHMENTS FOR
AERIAL SERVICE WIRE

Scale: NTS

March 2001

508-1