
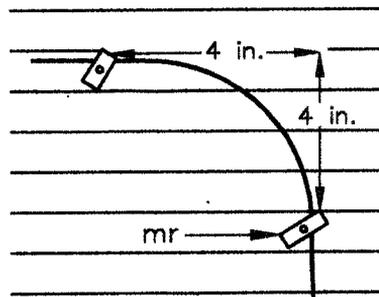



INSIDE CORNER

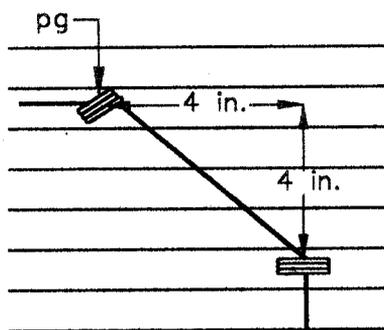

TURN

Notes:

- ① Refer to Table 4 for appropriate fastening device.
- ② For converting English units to metric units use 1 in. = 25.4 mm.

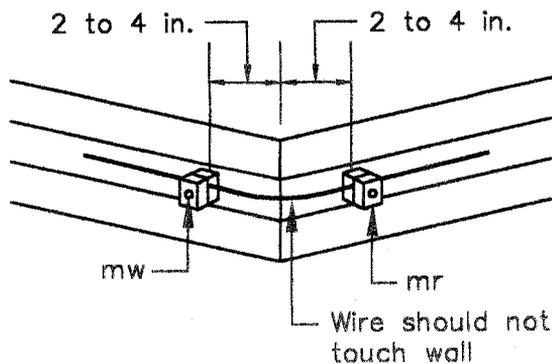

OUTSIDE CORNER

ITEMS	MATERIALS	NO. REQUIRED
*pg	Screw eye, insulated	as required
*mr	Knob, insulator, "C"	as required
*mw	Screw, R.H., wood	as required
RURAL TELECOMMUNICATIONS CONSTRUCTION PRACTICES INSULATED INTERMEDIATE ATTACHMENTS FOR SERVICE WIRES		
Scale: NTS		March 2001
		510